 


Tevion 1923DT TV/DVD Quick Start Guide


Insert the batteries

- Insert two AAA size batteries in the remote control, ensuring that the polarity is correct, as shown.

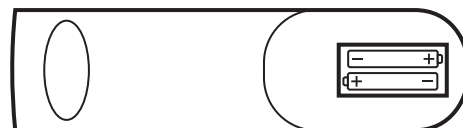

Connect the set

- Connect the aerial plug to the **RF** socket on the back of the set.
- Connect the mains adaptor cable to the **DC-12V** socket on the back of the set, then connect the mains cable between the adaptor and the mains supply. The indicator on the front of the set will show red.
- To switch on, press the **POWER** button on the top of the set, or aim the remote control at the indicator on the front of the set, and press the red **POWER** button. The indicator on the front of the set will show blue.

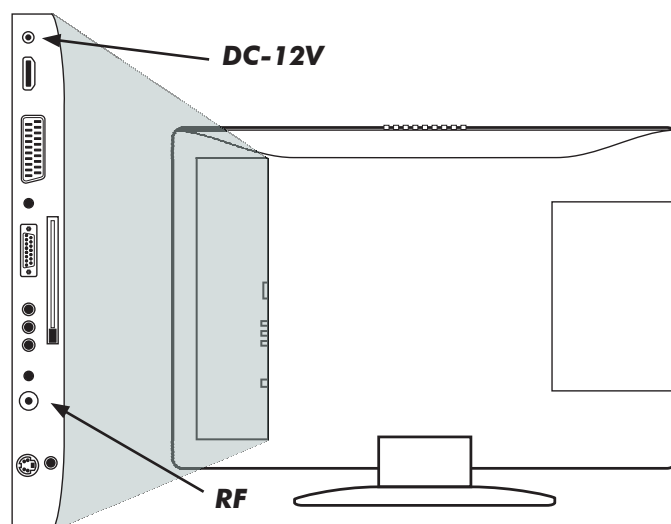

Tune the TV

 
The first time you switch on the set, you should see the Installation Guide screen:

- Use the ◀ and ▶ buttons on the remote control to select the correct **Language**.
- Press the ▼ button to highlight **Auto Tuning**, then press the **OK** button.




If you do not see the Installation Guide screen:

- Press the **MENU** button on the remote control. The **CHANNEL** menu is displayed.
- Press the ▼ button to highlight **Auto Tuning**, then press the **OK** button.

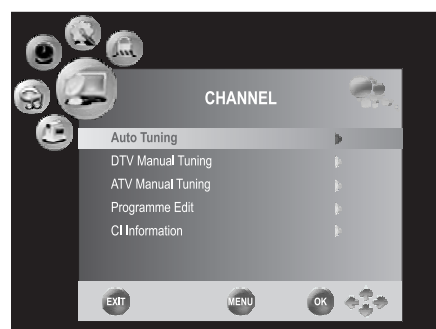

When you see the Auto Tuning box:

- Use the ◀ and ▶ buttons to select the correct **Country**. (Users in Eire should select 'UK', which uses the same TV bands.)
- Press the ▼ button to highlight **Start**, then press the **OK** button. The TV will automatically search for any digital and analog TV and radio stations that are available in your area. This may take several minutes.

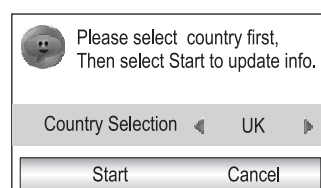


If the stations are not in the order you would prefer, or if there are stations you do not want to watch, then see **Using the Channel menu** in the User Guide, to find out how to edit the programme list.

Tevion 1923DT TV/DVD Quick Start Guide – continued


Watch digital TV

- Press the **SOURCE** button on the remote control. Press the **▲** and **▼** buttons until **DTV** is highlighted, then press **OK**.
- Press the **■/EPG** button on the remote control. Use the **▲**, **▼**, **◀** and **▶** buttons to select a programme from the electronic programme guide, press **OK** to preview it, then **▲/EXIT** to watch it.
OR press the **PROGRAM+** and **PROGRAM-** buttons on the remote control until you see the programme that you want to watch.
OR press the **PRO.LIST** button, use the **▲** and **▼** buttons to choose the programme that you want to watch, press **OK** to preview it, then **▲/EXIT** to make the list disappear.
- To view the subtitles on digital TV – if any are available – press the **MENU/SUB** button, use the **▲** and **▼** buttons to select a language, then press **OK**.

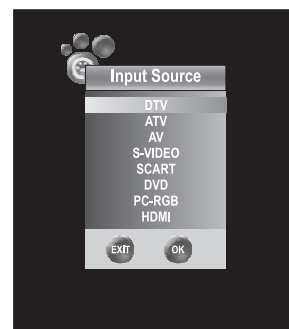


Watch analogue TV

 - Press the **SOURCE** button on the remote control. Press the **▲** and **▼** buttons until **ATV** is highlighted, then press **OK**.
- Press the numbered buttons **(1)**, **(2)** etc on the remote control for the programme that you want to watch.
OR press the **PROGRAM+** and **PROGRAM-** buttons on the remote control until you see the programme that you want to watch.
OR press the **PRO.LIST** button, use the **▲** and **▼** buttons to choose the programme that you want to watch, press **OK** to preview it, then **▲/EXIT** to make the list disappear.
- To view the subtitles on analogue TV – if any are available – select teletext page **888** (see **Using Teletext in the User Guide**).

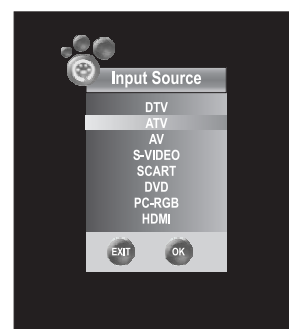

Watch a DVD

- Gently slide a disc into the slot on the left, making sure that the label is facing **away** from you.
- Use the **▶II/TTX** button on the remote control to play and pause viewing, and **▲/EXIT** to eject the disc.
- Use the **▲**, **▼**, **◀** and **▶** and **OK** buttons to operate any menus recorded on the DVD.

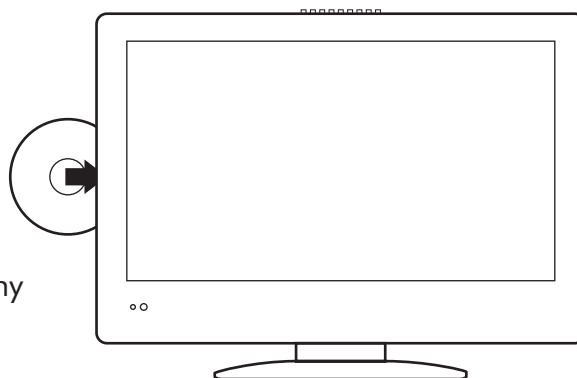

Adjust the sound volume

- Press the **VOL+** and **VOL-** buttons to adjust the volume.

Turn the power off

- Switch the set to standby mode, by pressing the **POWER** button on the top of the set or the red **POWER** button on the remote control.
- If you will not be using the set for some time, unplug or turn off at the mains supply.