


GETTING STARTED:

M945 Super ACE III Computerised Sewing Machine

To help you get started, please follow these simple instructions in the order shown below. However, before you do so, read the safety instructions in the Instruction Manual.

Step 1

Unpack the sewing machine, and familiarise yourself with all the parts and controls that are mentioned in these instructions.

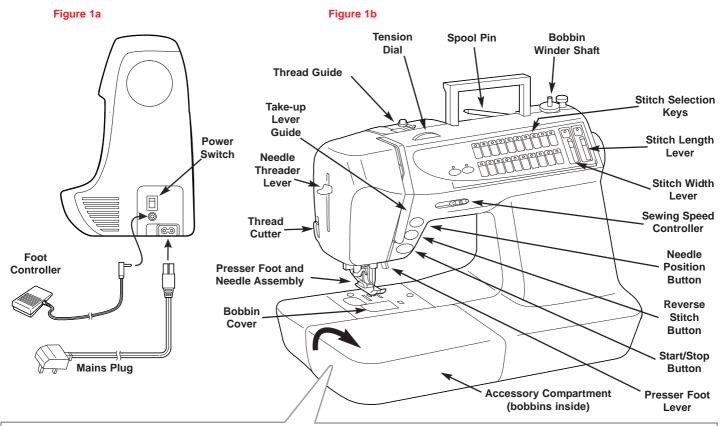


- Tilt the lid of the accessory compartment up and towards you to open it.
- Inside are various accessories including a number of bobbins.
- More accessories, including two **spool caps**, can be found inside the **accessory pouch** packed with the machine.

Step 2 Prepare the sewing machine for use.

- The machine can be operated either by the start/stop button or by the foot controller.
 - If you intend to use the **foot controller**, plug it in as shown in **figure 1a** and place it on the floor.
- Plug in the mains connector at the right hand side of the machine, as shown in figure 1a. Connect the mains plug into a wall socket.


Set the **tension** dial to **4**.

- Set the stitch width lever to minimum and the stitch length lever to midway (figure 2a).
- Set the **sewing speed** controller to *midway* (**figure 2b**).

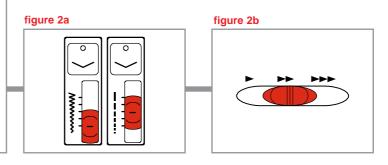

Step 3 Winding the bobbin. (Your machine may be supplied with a fully wound bobbin, but you may want to fill another bobbin with your own thread.)

 - Set the power switch to on (I) and the sewing speed controller to maximum.
 - Place a spool of thread on the **spool pin**, with the thread coming from the bottom (**figure 3a**).
- Choose a **spool cap** slightly larger than the spool, and push it firmly onto the spool pin to hold the spool.
 - If you are using a fine thread, then pull the spool cap back slightly so that there is a slight gap (figure 3b).



- Loop the thread behind and over the hook then clockwise around the disk (figure 3d).
- Clip a bobbin onto the bobbin winding shaft (figure 3e).


Push the bobbin winding shaft firmly to the right until it clicks into place against the stop.

 
Wind the thread clockwise around the bobbin four or five times, then pass the thread down through the slit and pull to the right to trim the thread on the **cutter**.

 
• Using the start/stop button or the foot controller: start the machine, and continue winding until the winding shaft stops automatically.


Push the bobbin winding shaft back to the left, cut the thread (figure 3f), and remove the bobbin from the shaft.

Unwind the thread from the disk.

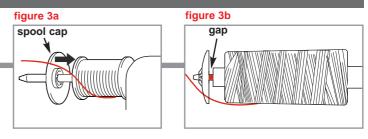





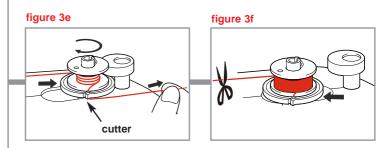



Step 4 Setting the bold fitted, but you


Setting the bobbin. (Your machine may be supplied with a bobbin already fitted, but you may want to use another bobbin with your own thread.)

- Open the **bobbin cover** by sliding the latch to the right (**figure 4a**).
- Leaving about 15cm (6in) of thread trailing, insert the bobbin into the shuttle with the thread direction anti-clockwise as shown in **figure 4b**.

 Carefully guide the thread around the channel as shown, then pull towards you to trim the thread on the cutter.



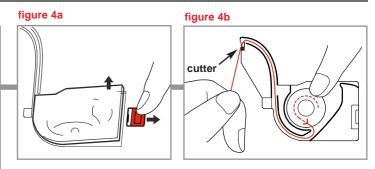


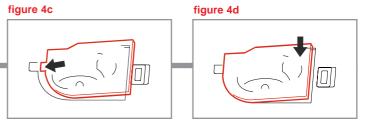


Upper threading.


Important:

 - Raise the presser foot by pushing the **presser foot** lever upwards (figure 5a).
- Raise the needle by pressing the needle position button (figure 5b).



  Unwind about 500mm (20in) of thread and, holding the thread with a finger as shown, pass it under the thread guide and forwards down the slot (figure 5c).





- Pull the thread up the left side of the take-up lever guide, and all the way to the back of the slot (figure 5e).
- Pull the thread over to the left, then back downwards again (figure 5f).

This should hook the thread around the take-up lever, which is just visible inside the slot. If it does not, then try again.

figure 5a




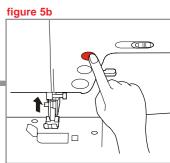


figure 5c

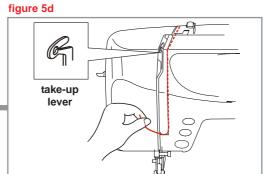

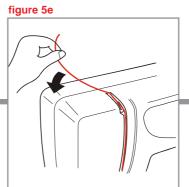

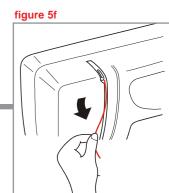

Important:

Lower the presser foot by pushing the presser foot lever downwards (figure 5g).


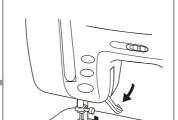


figure 5g

Step 6 Threading the needle.

 - Pass the thread behind the **needle guide**, leaving about 15cm (6in) of thread trailing (**figure 6a**).
- Pull the thread out to the left, underneath the threading guide (figure 6b).



 Continue pushing the lever all the way down, so that the threader rotates to engage with the needle (figure 6d).


The threader hook will pass right through the eye of the needle from the back.


- Pull the thread to the right across the threader, where it should slip under the **hook** (**figure 6e**).
- Holding the thread loosely, release the needle threader lever, so that the hook comes back out of the eye and the threader springs back upwards.


The hook should pull a loop of thread through the needle (figure 6f). *If it does not, then try again.*

Pull the loop to draw the thread all the way out through the back of the needle.

 Raise the presser foot, and pass the thread between the toes of the foot, and out towards the back of the machine.

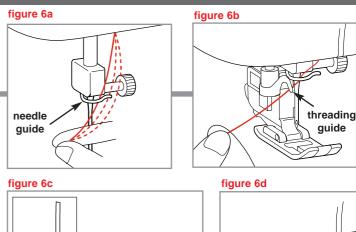

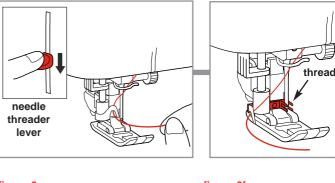

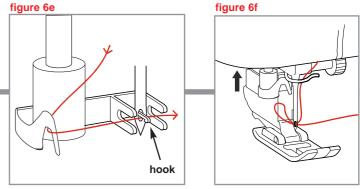

Starting to sew.

• Set the power switch to on (1).

Make sure the presser foot is up by pushing the **presser foot lever** upwards, and the needle is at its highest position by pressing the **needle position** button.

Place the fabric under the foot with the needle about 1 cm (3/8 in) from the rear edge of the fabric, and lower the presser foot onto the fabric.


• Set the **sewing speed control** to *midway* (until you are used to the machine).

To start sewing, press the **start/stop button** or use the **foot controller**.

To stop, press the start/stop button again or release the foot controller.

To reverse sew, press and hold the **reverse stitch button**.

When you have finished sewing, raise the presser foot and the needle.
Gently pull the fabric out, and cut the thread using the thread cutter (figure 7).

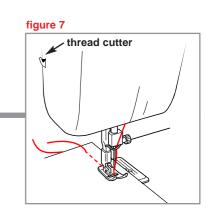

To learn how to use the more advanced features of the Super ACE III sewing machine, you should read the Instruction Manual. For further assistance, phone: 0870 830 4020, email: support@brother-support.co.uk or visit our website: www.brother-support.co.uk

Thank you for choosing a Brother product.