


DOUGHNUT FRYER

Cleaning Instructions

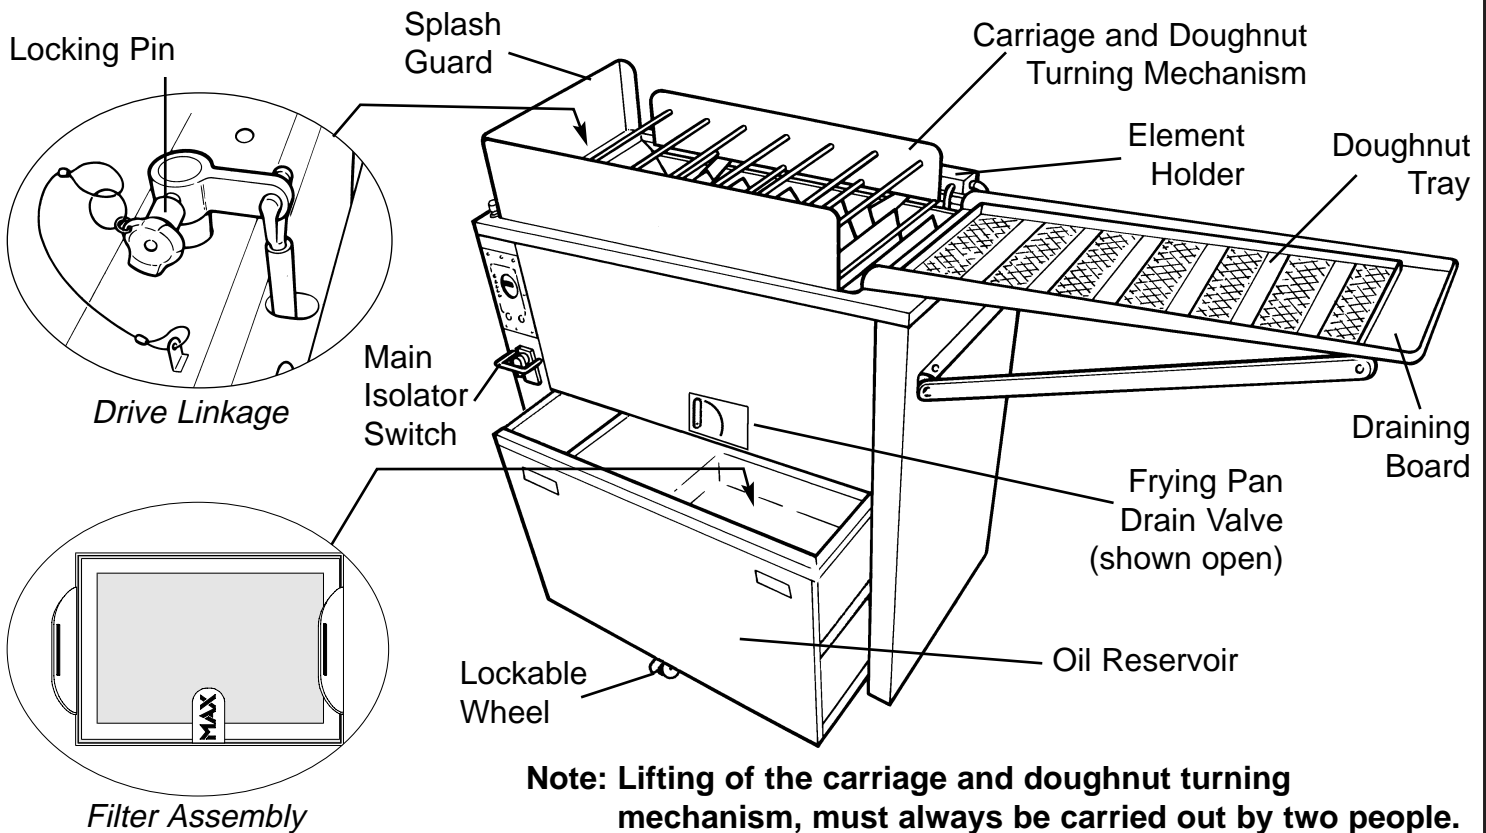

Weekly Cleaning

- Switch off the main isolator.
- Make sure the reservoir is closed. Open the frying pan drain valve and allow all the oil to drain into the reservoir.
- **Wait for the fryer to cool down.**
- Remove the splash guard.
- Support the weight of the carriage in one hand and remove the locking pin from the drive linkage. Lower the carriage into the bottom of the frying pan, to allow the linkage to separate.
- Lift out the carriage and doughnut turning mechanism (**2 people**).
- Lift out the elements, and hook the element holder under the pegs on the back of the fryer.
- Clean the fryer and all the removed parts.
- Replace all the clean parts (**2 people**).
- Lift the carriage, reconnect the drive linkage to the shaft, and refit the locking pin securely.
- Replace the splash guard.
- Close the drain valve.
- Switch on the main isolator.
- When the Oil Level lamp goes out, press the Heater Reset pushbutton to turn the heating elements on.

Changing the Filter Paper

- Switch off the main isolator.
- Release the wheel lock and pull the reservoir out as far as it will go.
- **Wait for the reservoir to cool down.**
- Remove the filter assembly.
- Dismantle and clean the filter assembly.
- Fit a new filter paper, refit the filter assembly in the reservoir, close the reservoir and lock the wheel.
- Switch on the main isolator.